



VoIP Recorder Desktop Installation Guide

The VoIP Recorder application consists of:

- Pre-Configured Mirrored Network Switch
- USB Network Interface (Optional, may not be required)
- VoIP Recorder Software (downloaded from web site)


Hardware Setup – Using A Shared Network Connection

If your IP Phone and PC use the same network connection follow these instructions:

- Disconnect the network connection from your telephone
- Connect the network line to Port 5 of the provided network switch
- Connect your VOIP telephone to port 1 of the provided network switch
- Connect your PC to port 4 of the provided network switch

For this type of installation you will not use the provided USB Network interface.

You will need to restart your phone and PC once the above connections have been made.

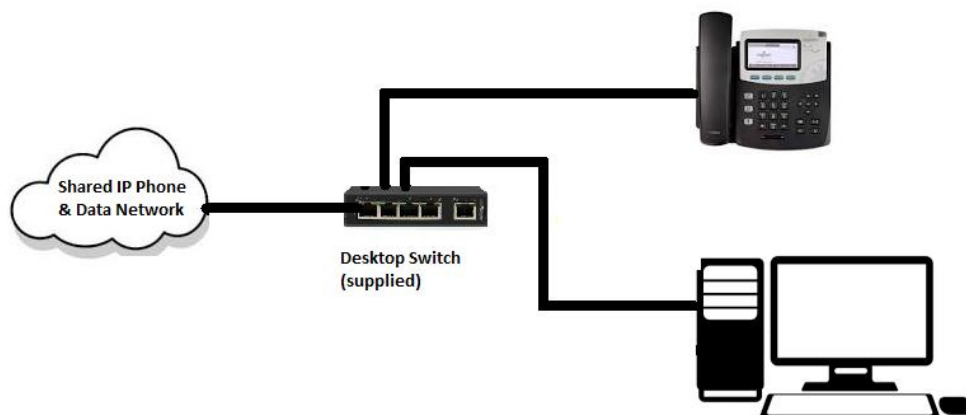


Hardware Setup – Separate Network Connections

If your IP Phone and PC use two separate network connections follow these instructions:

- Connect the USB Network interface to an available USB port on your PC. The drivers should automatically load for the interface- if not please follow the instructions on the installation guide included in the box to install the drivers.
- Disconnect the network connection from your telephone
- Connect the network line to Port 5 of the provided network switch
- Connect your VOIP telephone to port 1 of the provided network switch
- Connect from Port 4 of the provided network switch to the USB Network interface that was installed in step one above.

You will need to restart your phone and PC once the above connections have been made.

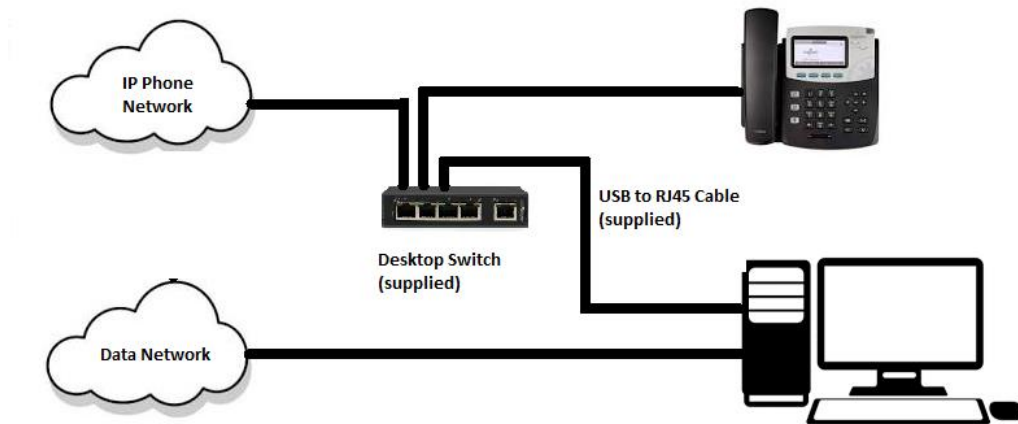


Software Installation

Once the hardware has been connected you will need to download the VoIP Recorder software from our website and install the software.

The software can be downloaded at www.usbcallrecord.com – click on the Download link on the right side of the menu bar and scroll down to the section for VoIP Recorder Desktop.

Once downloaded follow instructions for installing the software.

Select Protocol – when prompted select the protocol that your VOIP phones are using. If you are not sure what protocol your phone is using contact your phone provider.

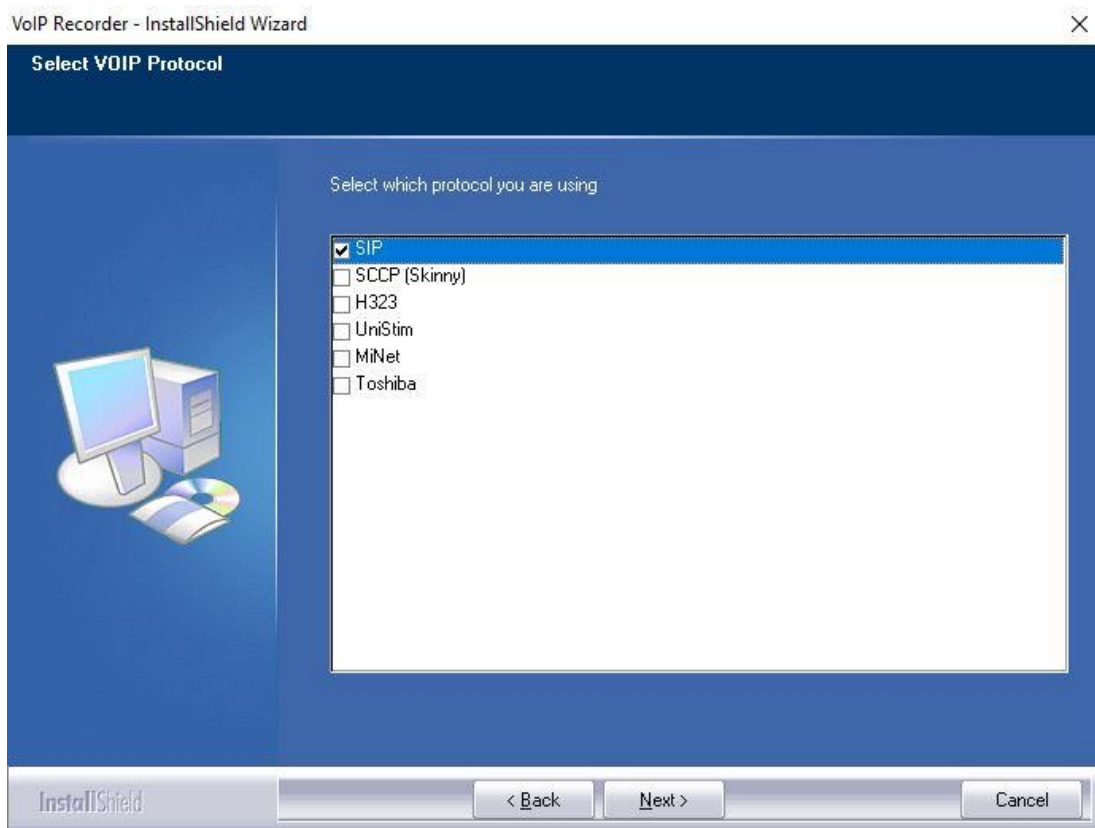


When the software installation is complete the Install Wizard will automatically launch.

Install Wizard

Select next on the first screen when you have verified that the hardware is connected.



Select the network interface that you will be using for VOIP recording

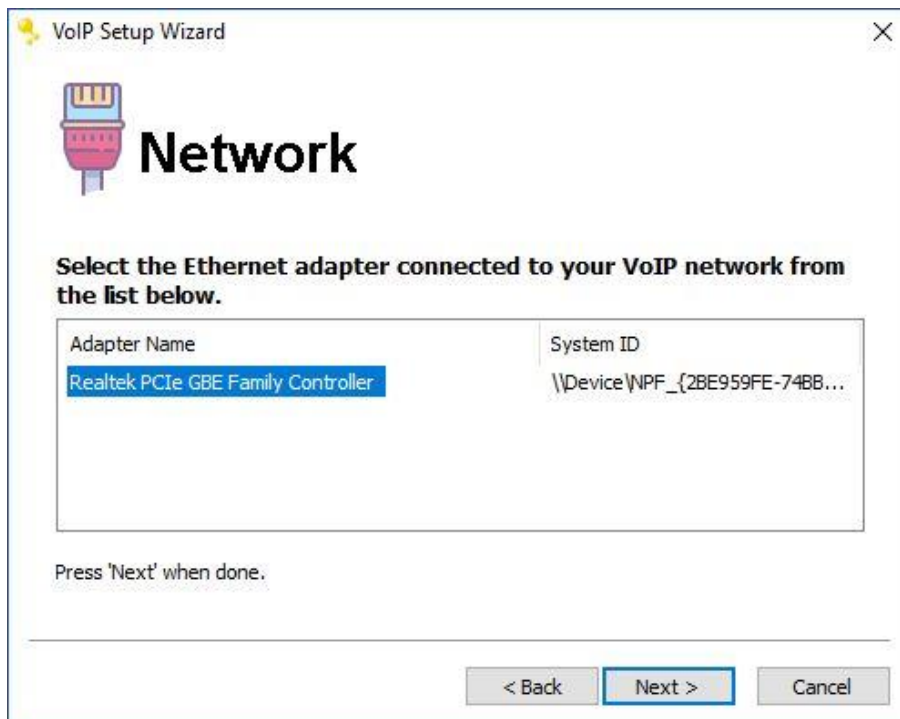

Enter the IP Address of your phone system or hosted service provider – if you do not have this information you will need to contact your IT or Phone provider.

VoIP Setup Wizard



VoIP Server

Enter the IP address of your PBX or VoIP provider in the box below.


Leave the address blank if you are receiving calls from a remote PBX or internet provider.

Press 'Next' when done.

< Back **Next >** Cancel

The VoIP Terminal window will identify your telephone – when you reach this screen you will need to make an outgoing call on your telephone in order for it to be identified

VoIP Setup Wizard



VoIP Terminal

Select your VoIP terminal from the list below.

Extension	IP Address	MAC Address	VLAN	Encoding

Press 'Next' when done.

< Back Next > Cancel

Finish the Wizard and your phone is set up for recording.

License Key

You will be prompted to send a License Request to get your License Key for recording. Save the file and email the license request to:

licence@irl-recording.com

You will receive your license key via email – once it is received save the license file to your pc and using the “Import License” option from the menu to import your license.

You can contact Technical Support at 800-930-8135 Option 3 if you need assistance with setup.